

## WHEEL REPLACEMENT INSTRUCTIONS (KIT NUMBERS 193139 and 193144)

**NOTE:** The dust cover provided in this kit **MUST BE USED** with this wheel. Be sure to remove and discard the old dust cover.

### REMOVE OLD WHEEL

1. Remove flanged locknut securing old wheel to axle arm.
2. Remove old wheel and shim washer(s) (if present).
3. Remove E-ring securing pinion assembly.
4. Remove pinion assembly and set aside for later installation.
5. Remove old dust cover and discard.

### INSTALL NEW WHEEL

1. Install new dust cover provided in this kit.
2. Reinstall pinion assembly and secure with E-ring.
3. Reinstall shim washer(s) (if any were present).
4. Install new wheel and secure with flanged locknut.

### KIT #193139 contents:

- (1) Wheel, 9" x 2", part number 180753
- (1) Dust Cover, part number 189403

### KIT #193144 contents:

- (1) Wheel, 8" x 2", part number 180756
- (1) Dust Cover, part number 189403

